


AP112

 **GEBERIT**

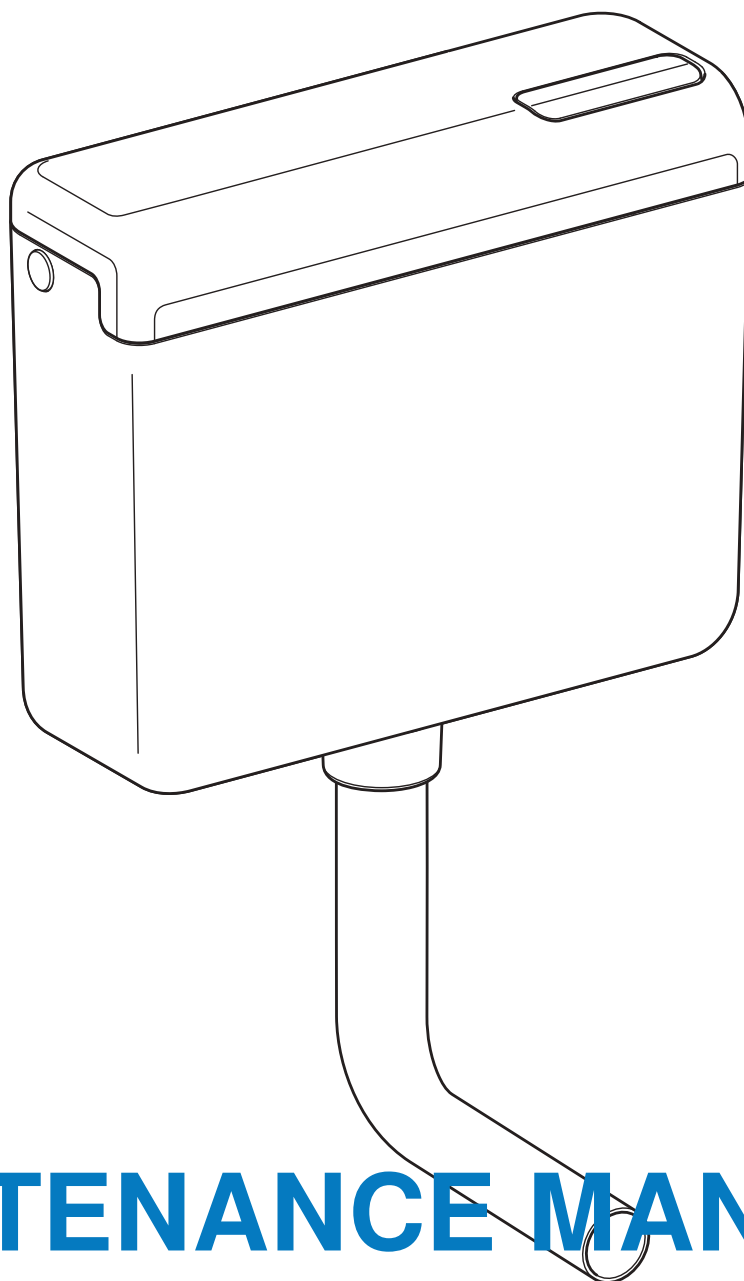


# MAINTENANCE MANUAL

INSTANDHALTUNGSANLEITUNG

MANUEL D'ENTRETIEN


ISTRUZIONI PER LA MANUTENZIONE

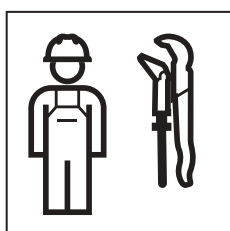




1

1

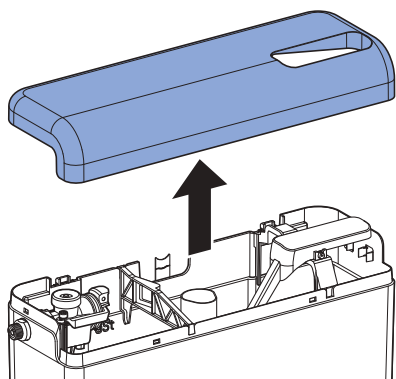


2

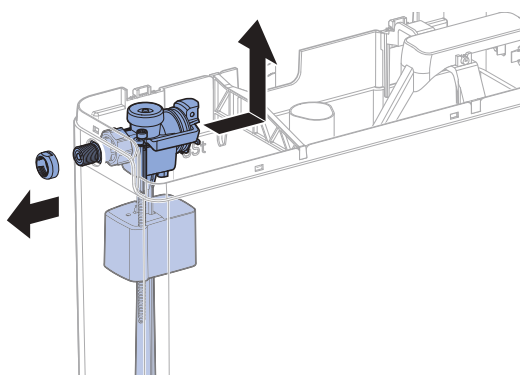


2


1

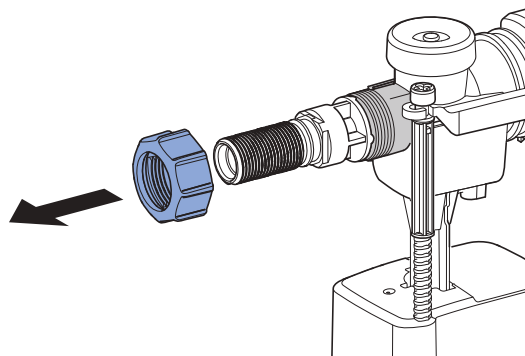


2

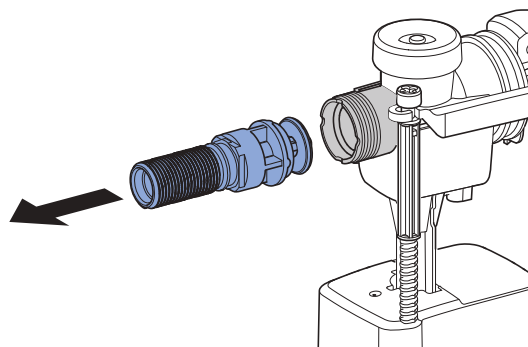

3

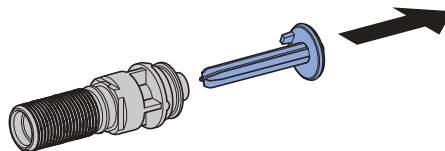


4

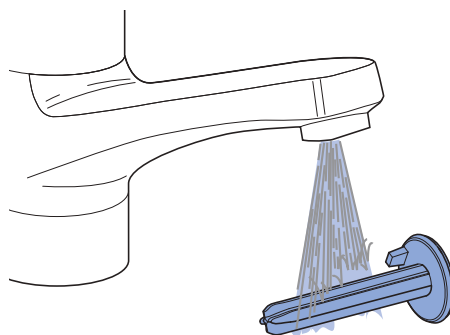


# 3


1

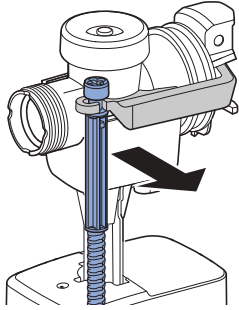


2

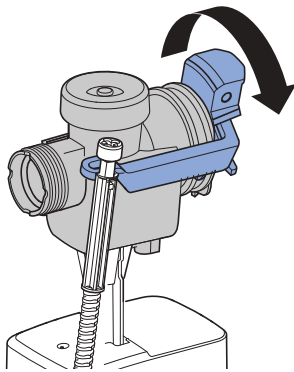



3

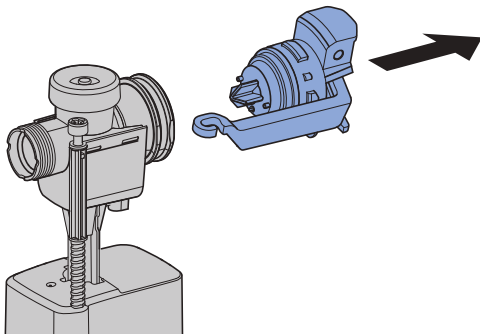

4

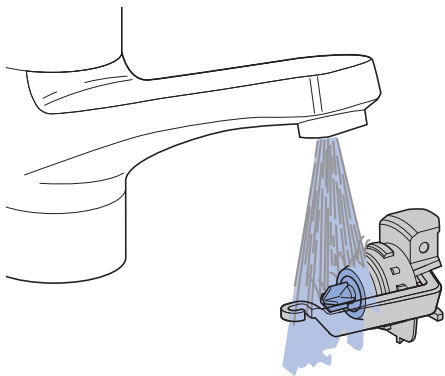


i

  


# 4


1

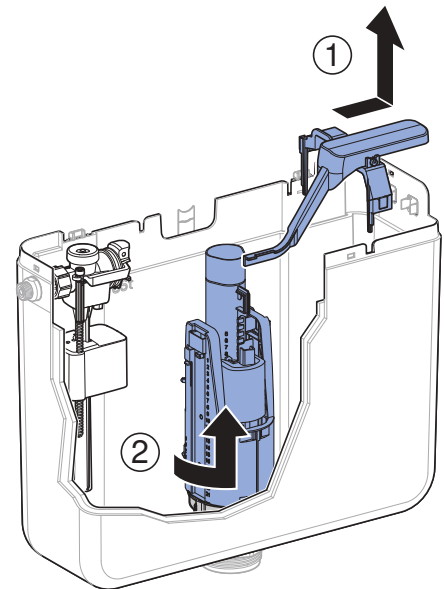


2

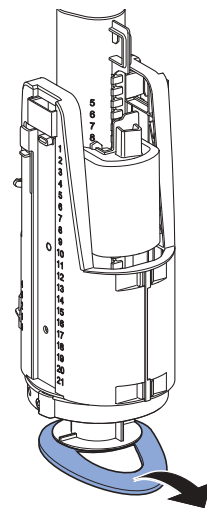


3

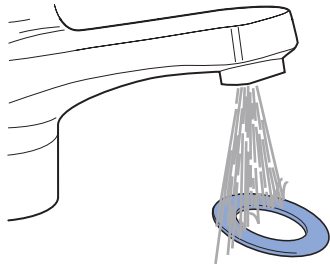



i

 

5

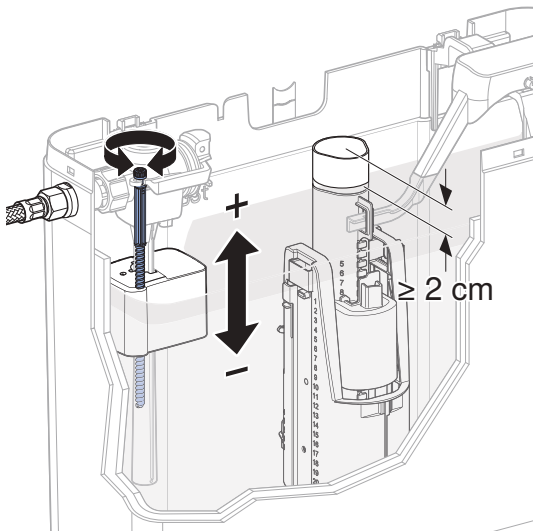

6

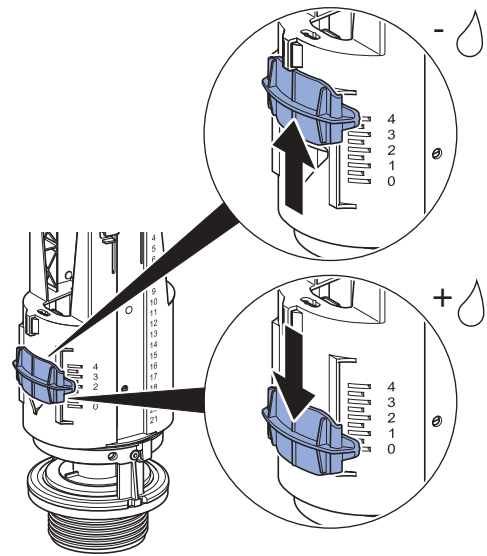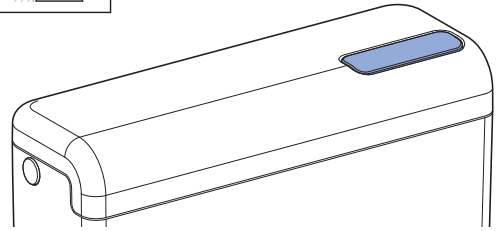

Geberit International AG  
Schachenstrasse 77, CH-8645 Jona  
documentation@geberit.com  
www.geberit.com

