 
 


Montážní návod
Assembly instruction





HLS800Y
HLS900Y

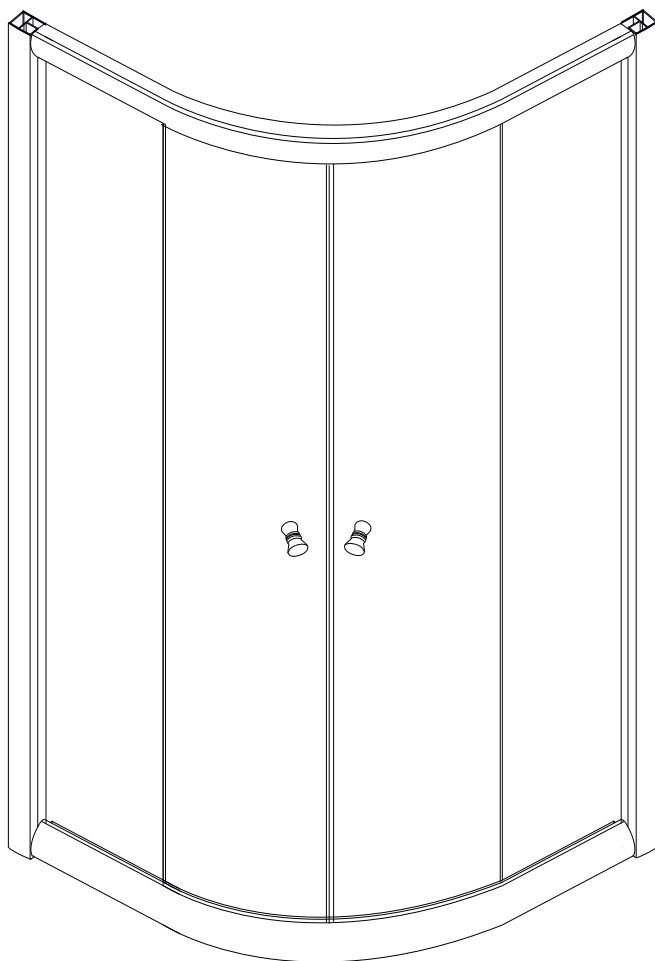


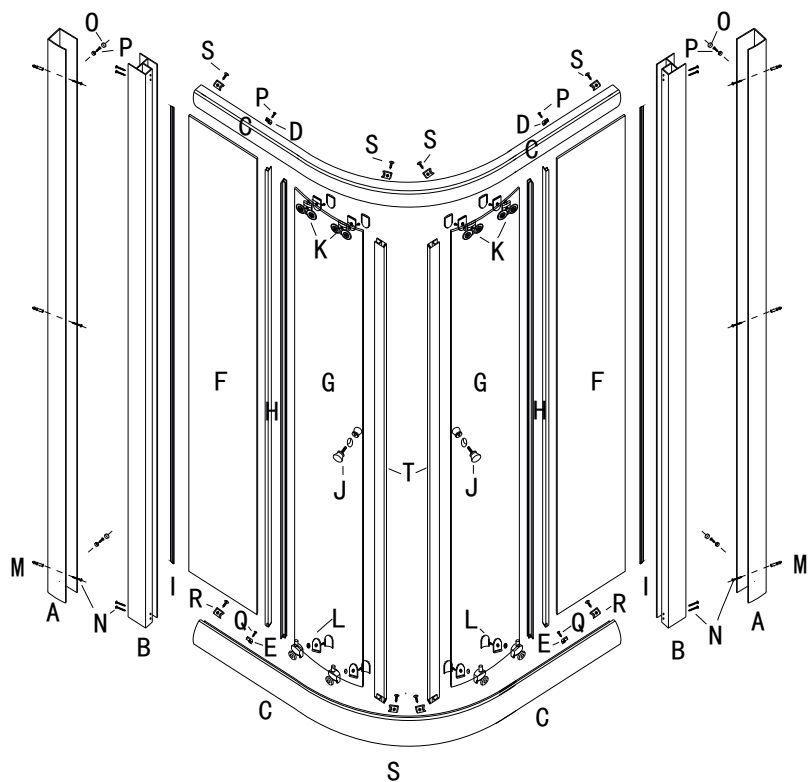


A		X2	I		X2	Q		X2
B		X2	J		X2	R		X8
C		X2	K		X4	S		X8
D		X2	L		X4	T		X1
E		X2	M		X6			
F		X2	N		X14			
G		X2	O		X4			
H		X4	P		X6			



A		x2
M		x6
N	 M4*30	x6

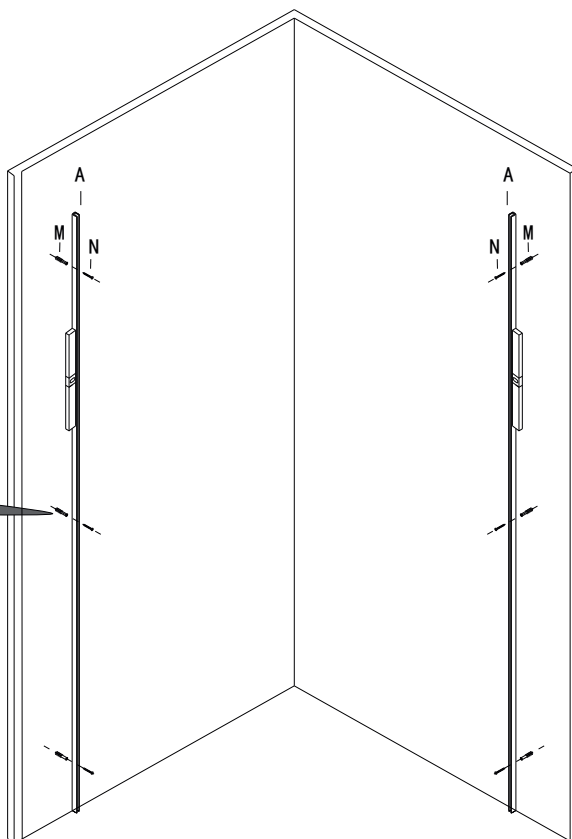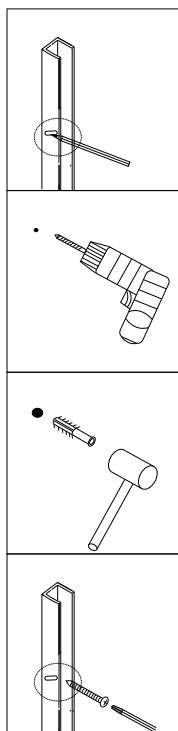    



B		X2	N	 M4*30	X8
C		X4	S	 M4*10	X8
R		X8			

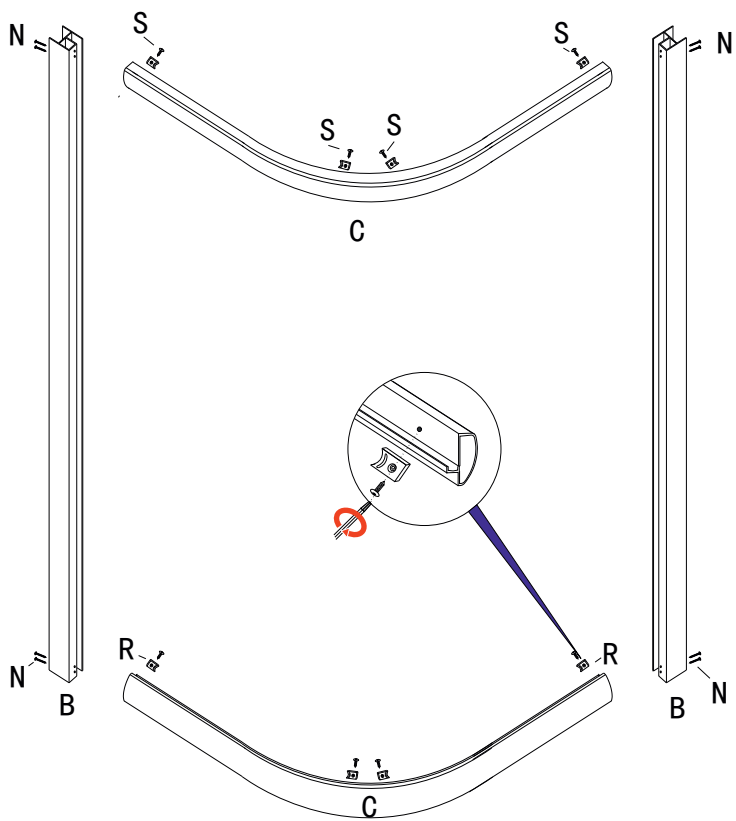  


0		X4
P	 M4*10	X4

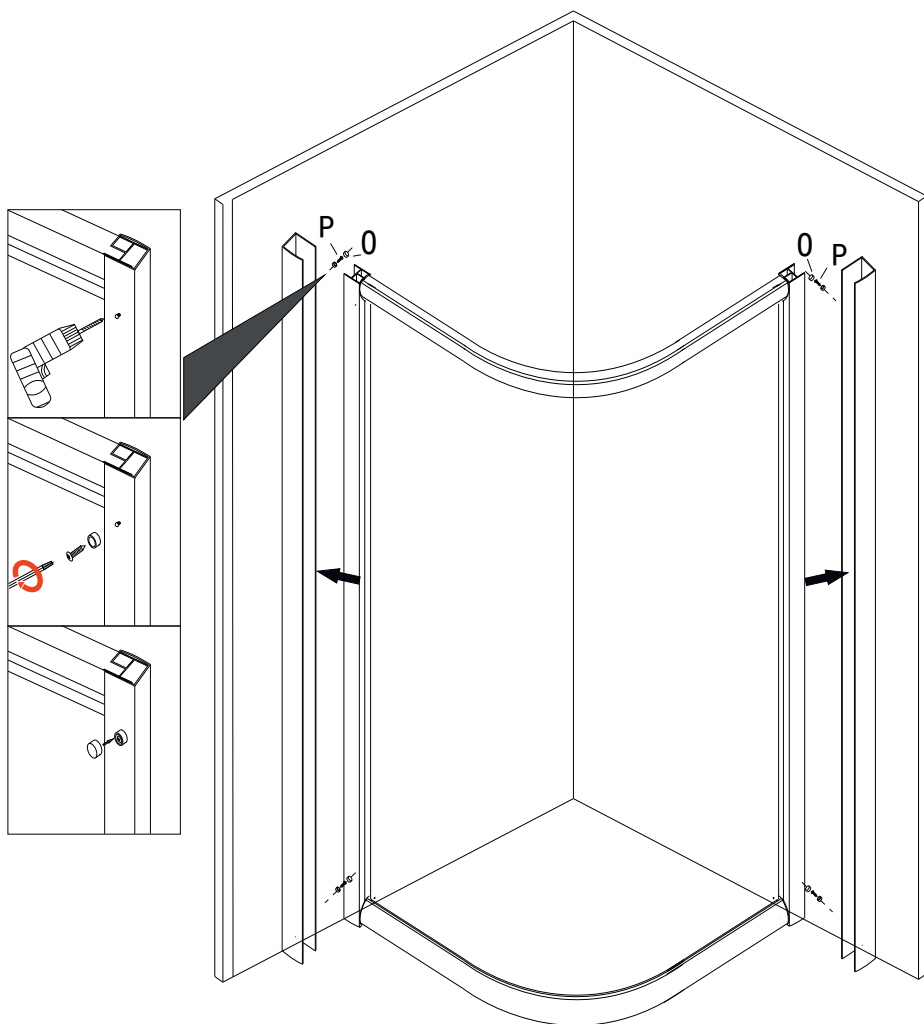  

D		X2	H		X2
E		X2	P	 M4*10	X2
F		X2	Q	 M4*8	X2
I		X2			

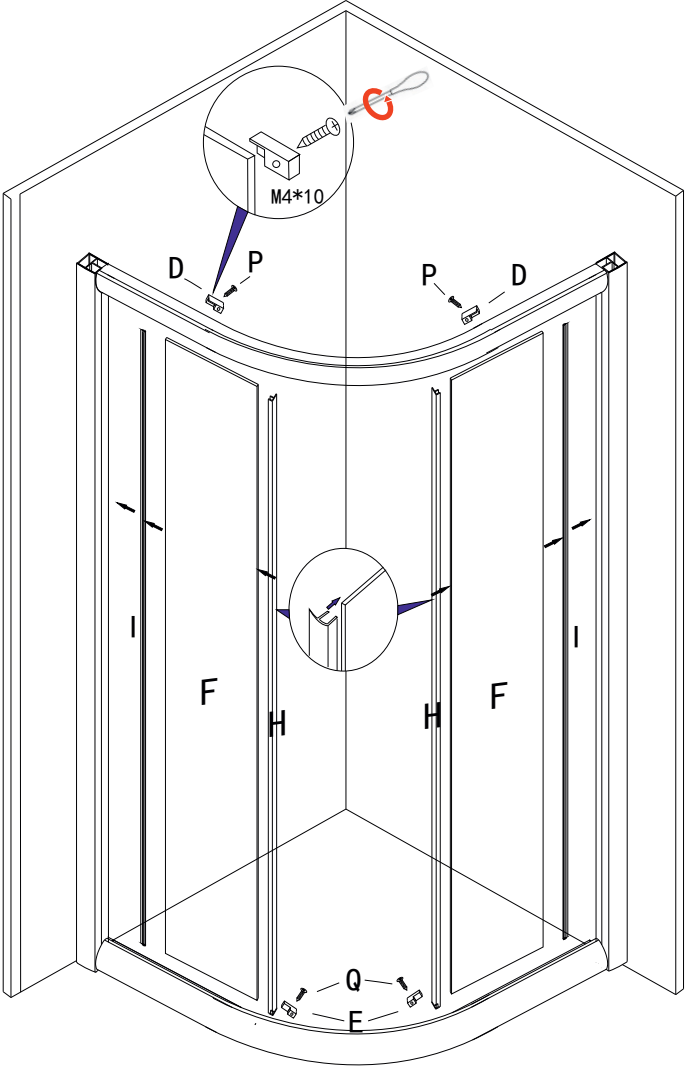  

 G		X2	T		X1
H		X2	L		X4
K		X4			

