

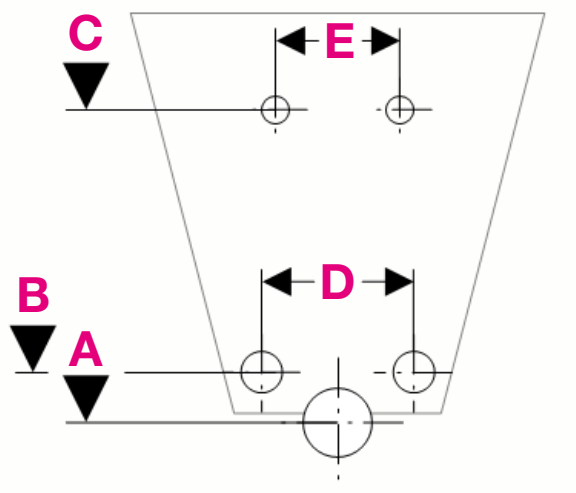
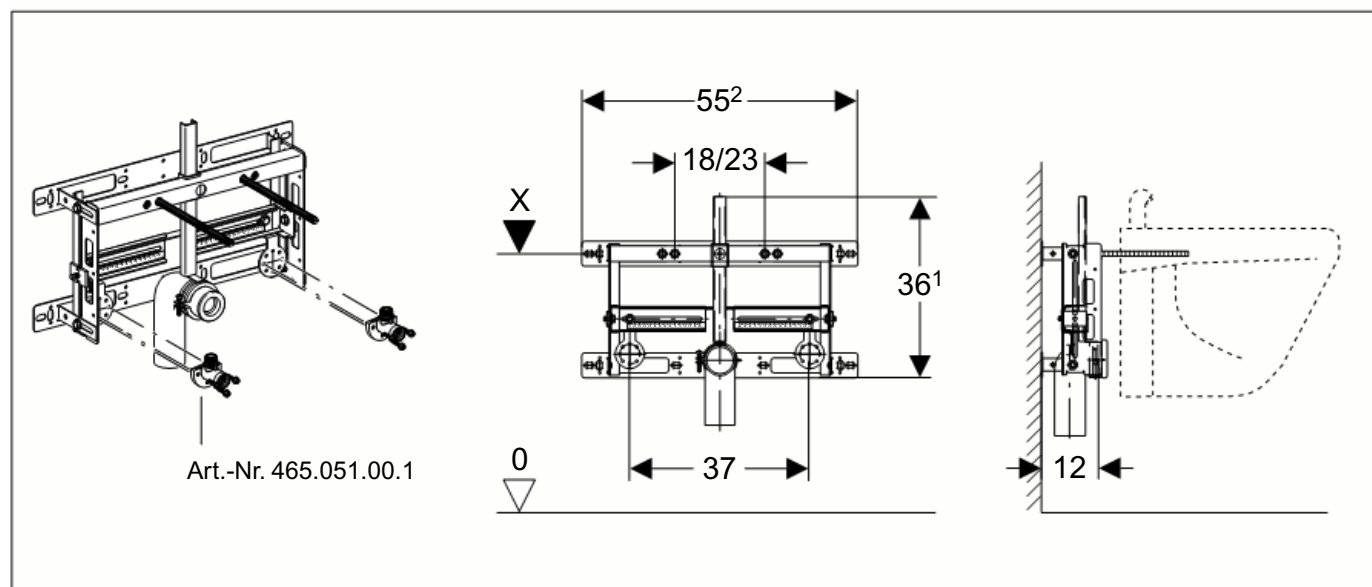
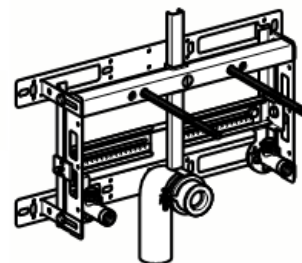
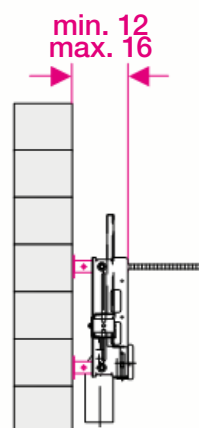
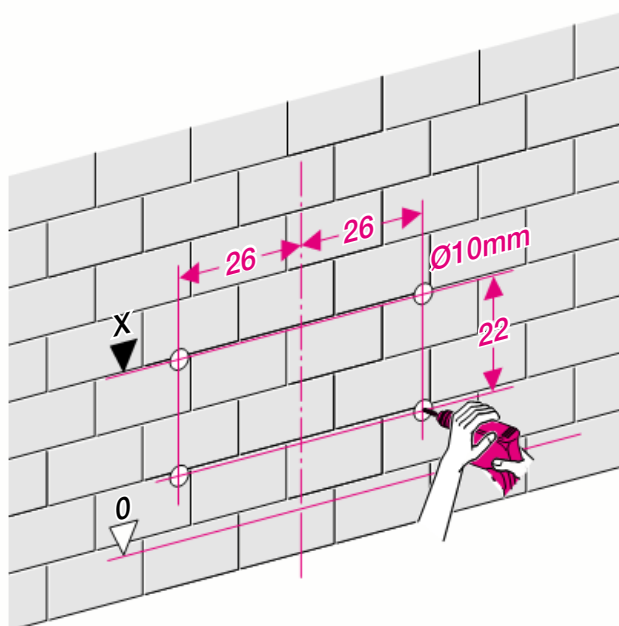
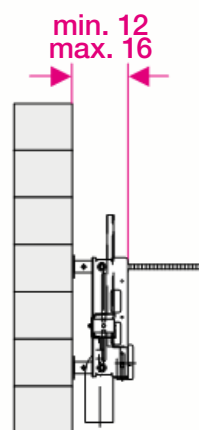
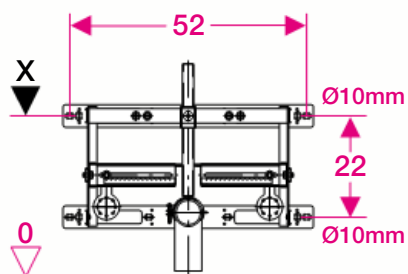


Montage Kombifix



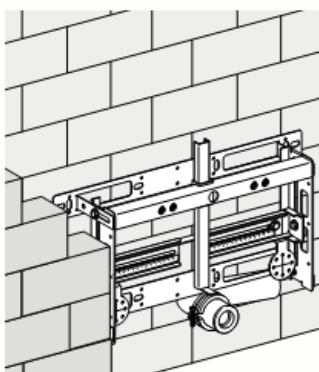


A	B	C	D	E
60-240	100-260	300-360	80-370	180/230




Montage Kombifix

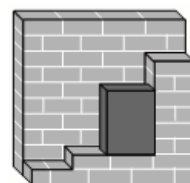




Montage Kombifix

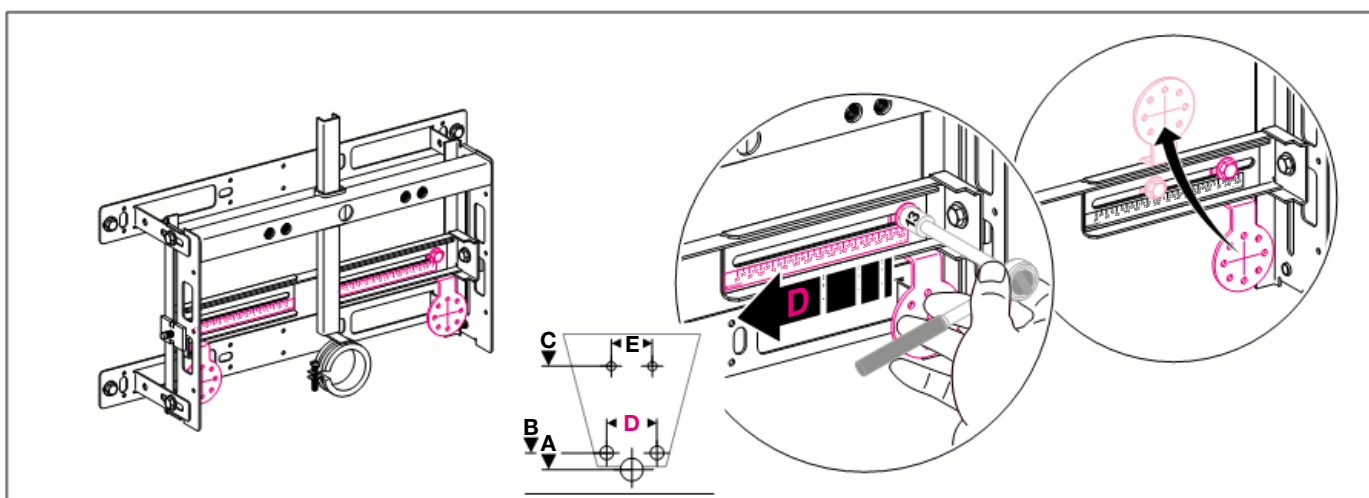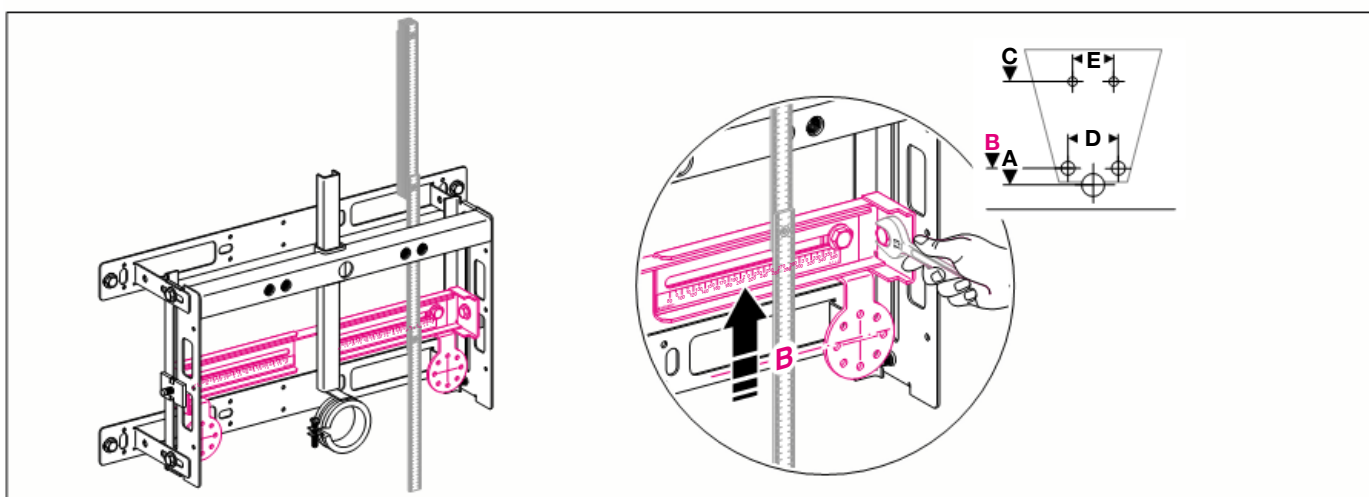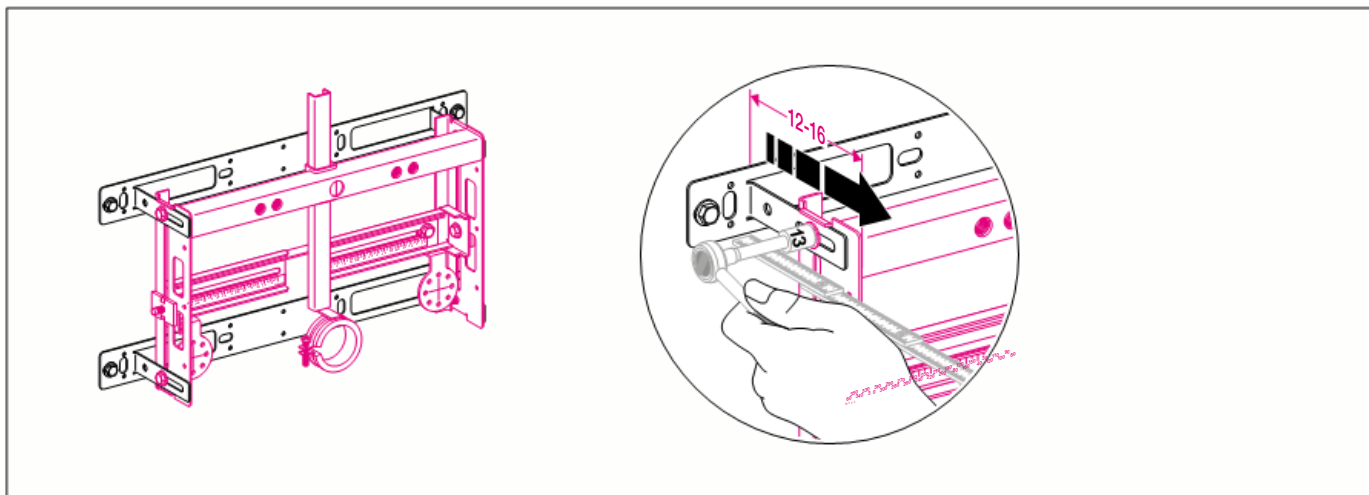




Montage Kombifix

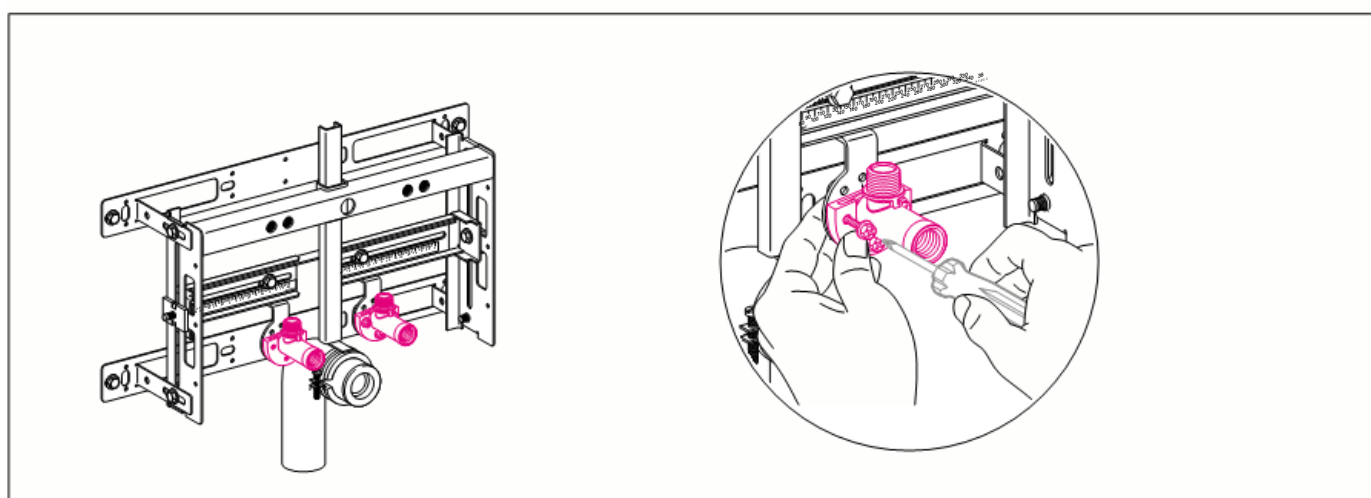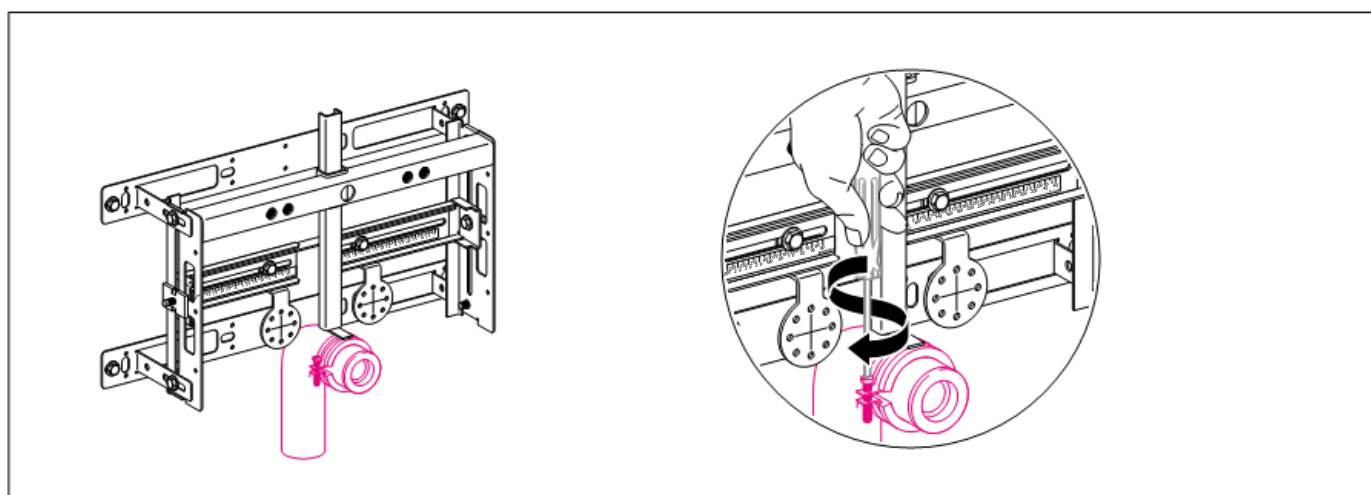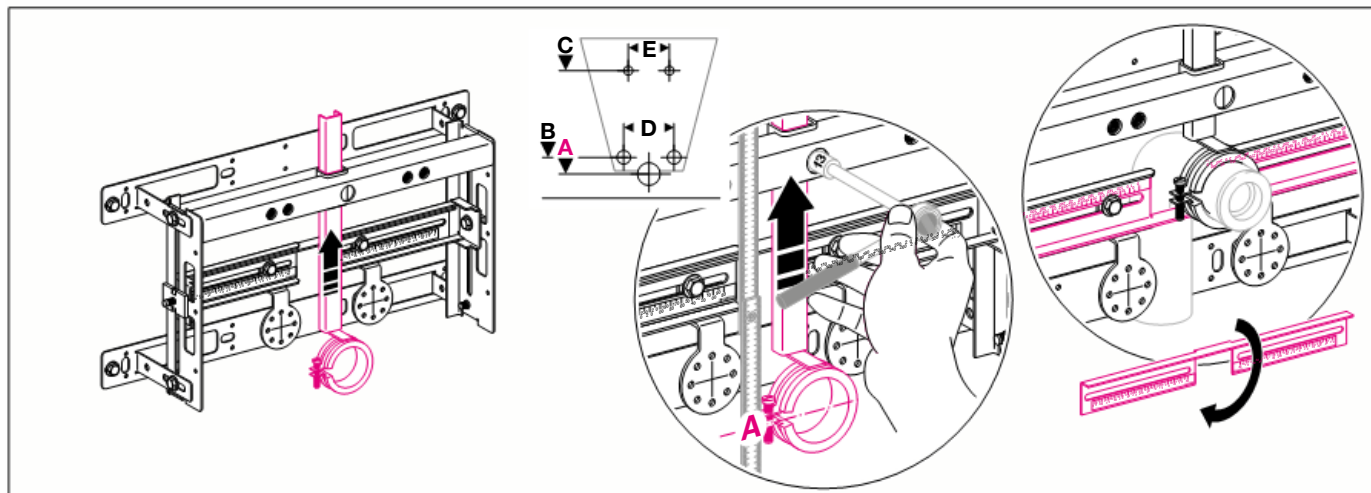




Montage Kombifix

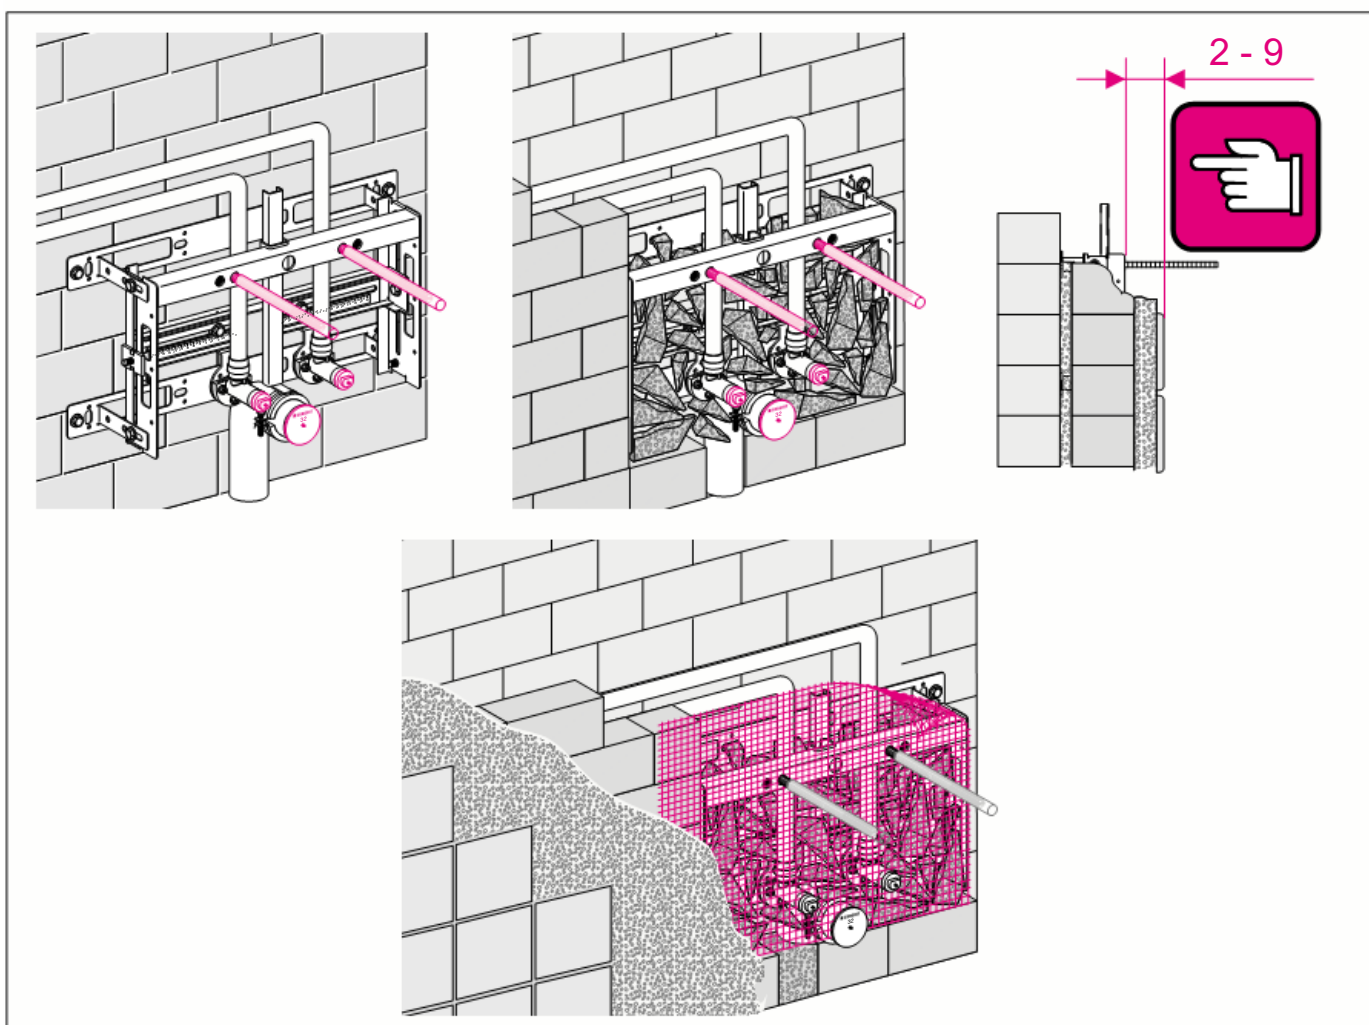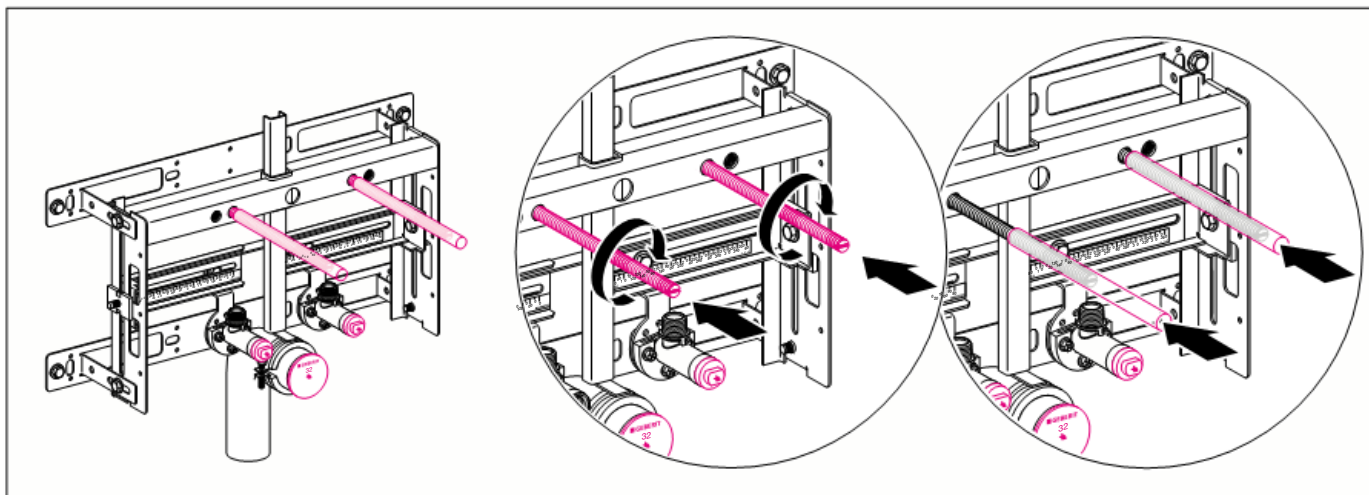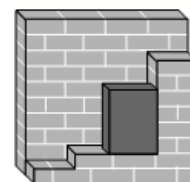

Montage Kombifix

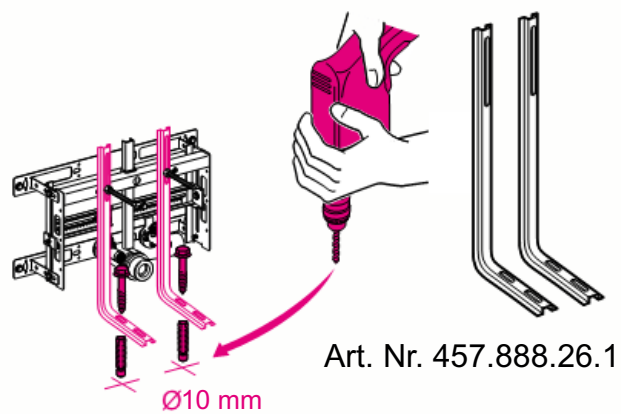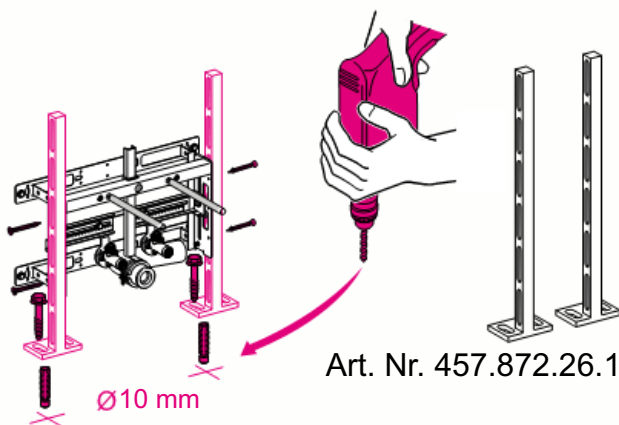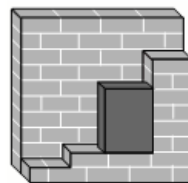

A

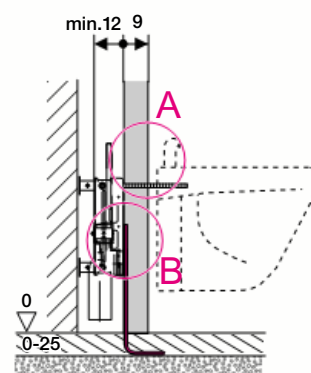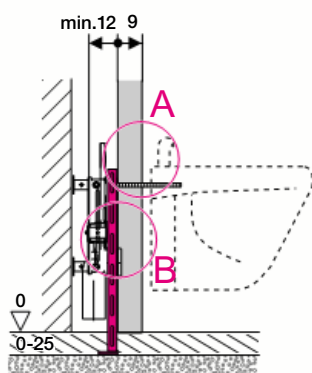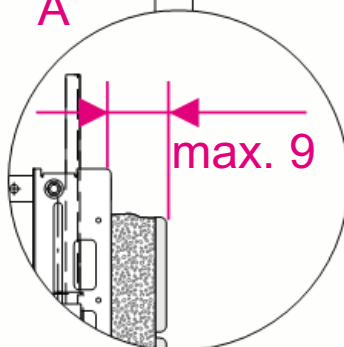

B

