


Installation instructions

Bath set for marble bathtub



BATH SET WITHOUT OVERFLOW FILLING


11041W
11041B
11041






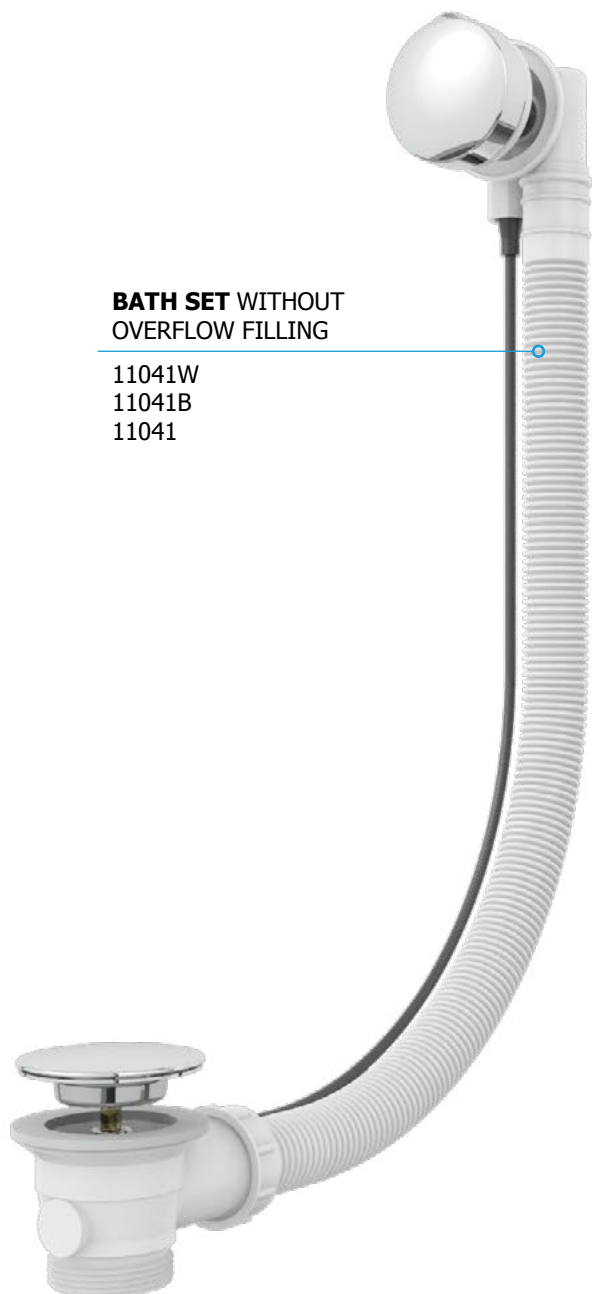


BATH SET WITH OVERFLOW FILLING

11051W
11051B
11051



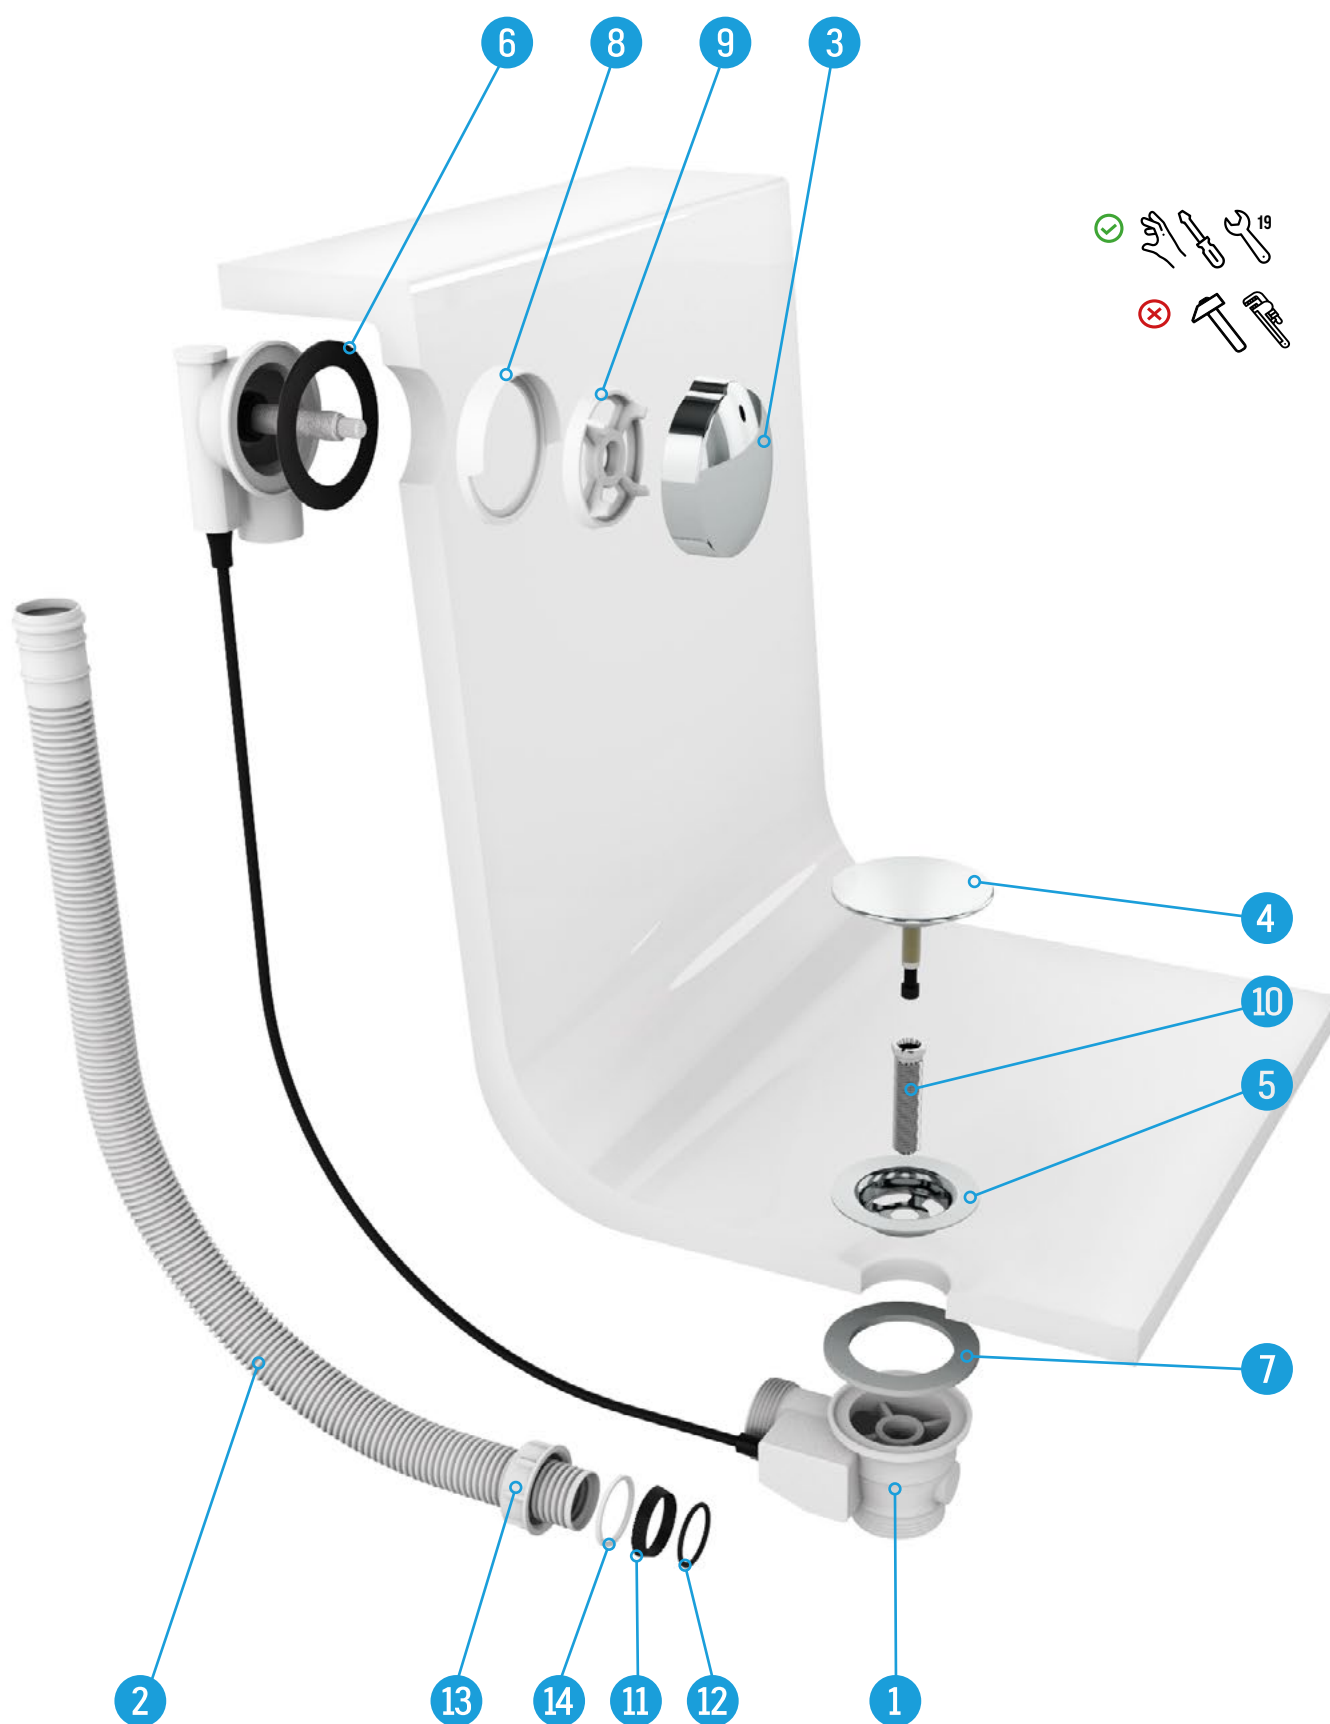


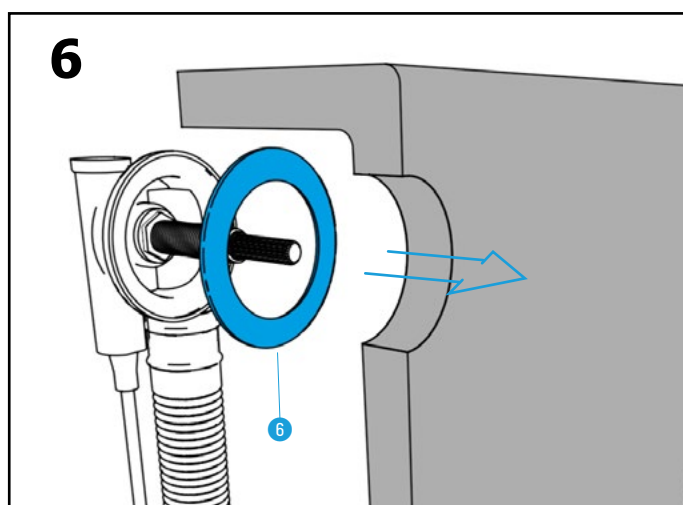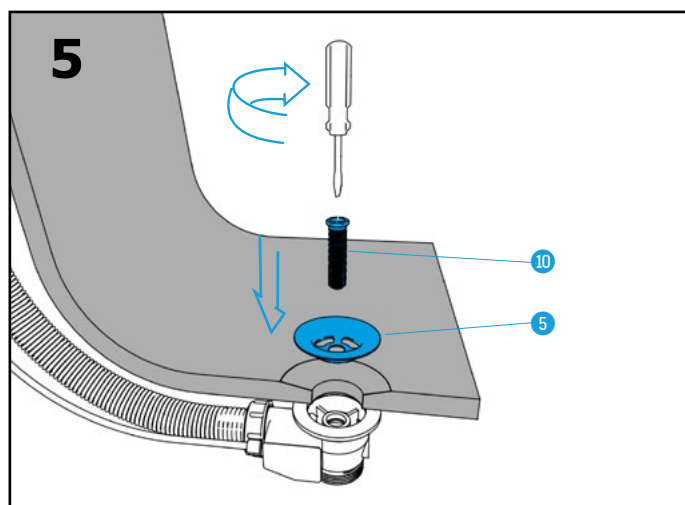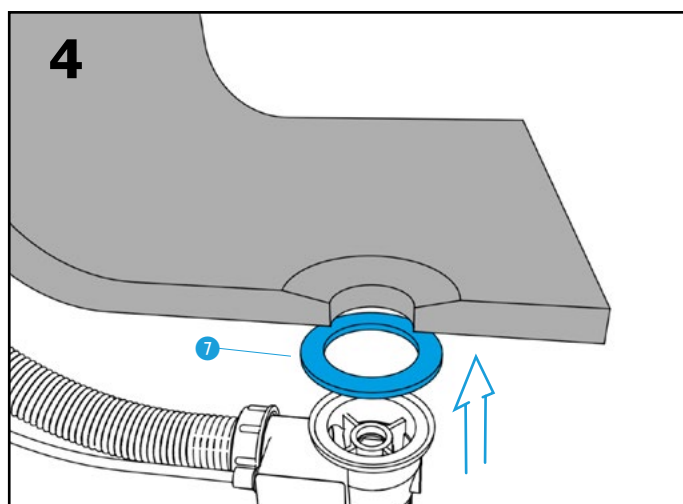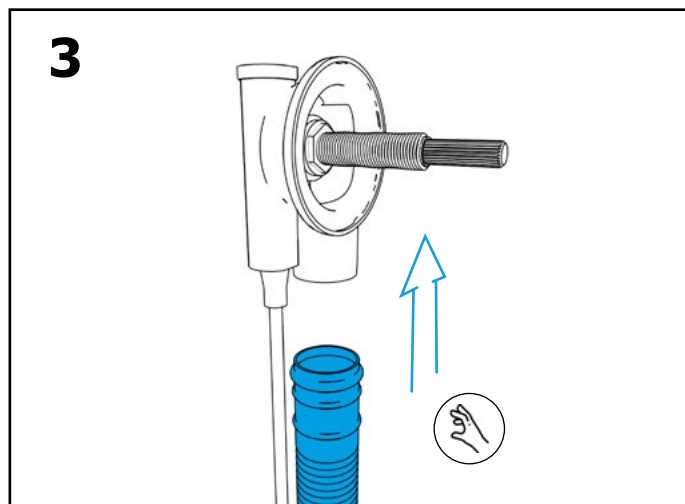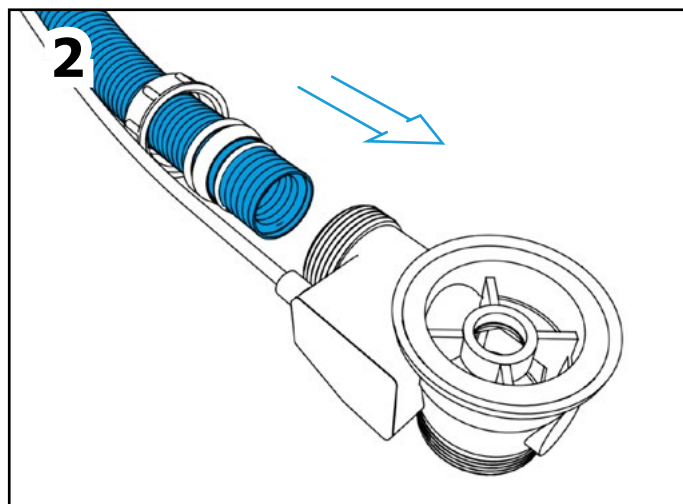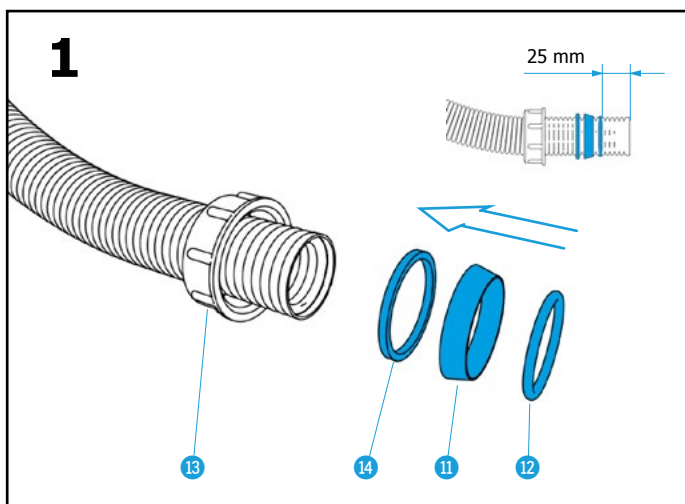


BATH SET
WITHOUT OVERFLOW FILLING

11041W
11041B
11041

7A

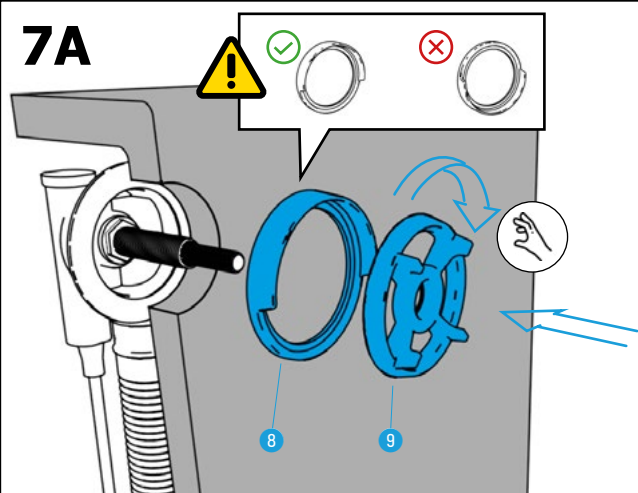


8A

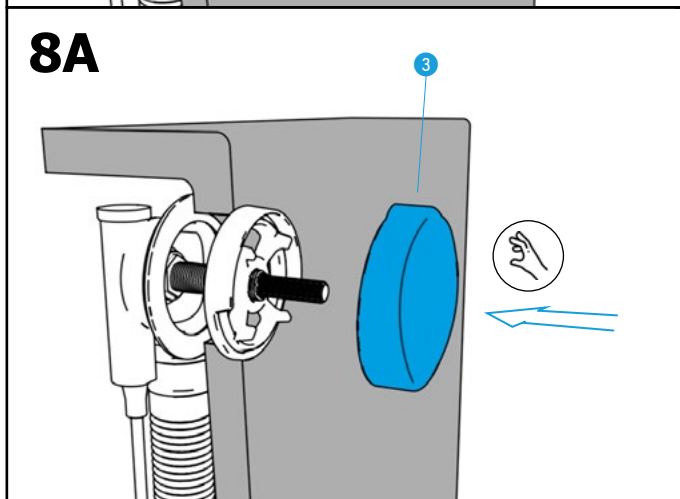


BATH SET
WITH OVERFLOW FILLING

11051W
11051B
11051


7B

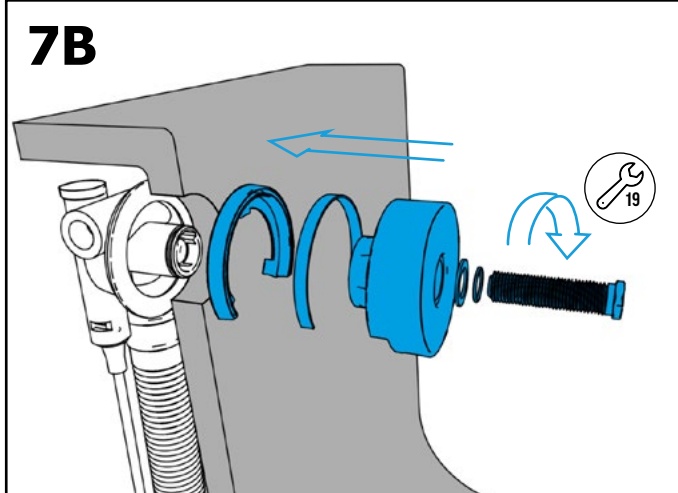

8B

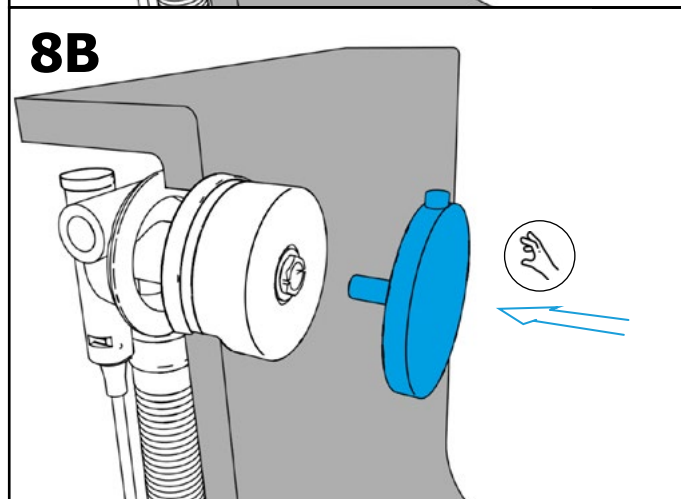

9

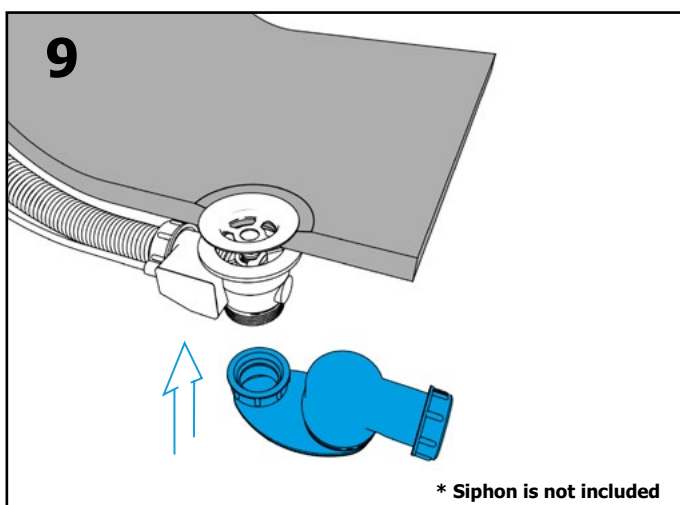

10

