

TAKO | TAKO SLIM

PL INSTRUKCJA MONTAŻU I EKSPLOATACJI

CZ NÁVOD NA MONTÁŽ A ÚDRŽBU

SK NÁVOD NA MONTÁŽ A ÚDRŽBU

EST PAIGALDUS- JA KASUTUSJUHEND

LT MONTAVIMO IR EKSPLOATAVIMO INSTRUKCIJA

LV MONTĀŽAS UN EKSPLOATĀCIJAS INSTRUKCIJA

DE MONTAGE- UND AUFBAUANLEITUNG

RO INSTRUCȚIUNI DE MONTAJ ȘI OPERARE

HU SZERELÉSI ÉS ÜZEMELTETÉSI ÚTMUTATÓ

UA ІНСТРУКЦІЯ З МОНТАЖУ І ЕКСПЛУАТАЦІЇ

BY ІНСТРУКЦЫЯ ПА МАНТАЖЫ І ЭКСПЛУАТАЦЫІ

RU ИНСТРУКЦИЯ ПО МОНТАЖУ И ЭКСПЛУАТАЦИИ

EN INSTRUCTIONS FOR ASSEMBLY AND USE

FR INSTALLATION ET UTILISATION – MODE

											
		1	2	3	4	5	6	7	8	9	
TAKO	80X80X16 90X90X16		3	12	3	3	6	3	0*	0*	0**
	80X80X16 90X90X16		3	12	3	3	6	3	0*	0*	0**
	80X80X4 90X90X4		0*	0*	0*	0*	0*	0*	0*	0*	0**
	80X80X4 90X90X4		0*	0*	0*	0*	0*	0*	0*	0*	0**
	100X80X4 120X90X4		0*	0*	0*	0*	0*	0*	0*	0*	0**
TAKO SLIM	80X80X4 90X90X4		0*	0*	0*	0*	0*	0*	0*	0*	1
	80X80X4 90X90X4		0*	0*	0*	0*	0*	0*	0*	0*	1

PL

*Możliwość dokupienia nóżek S907-002
 ** Syfon brodzikowy Ø90 TAKO S904-006

CZ

*Možnostnákupunohou S907-003
 **Sprchovávaníkasifon Ø90 TAKO S904-006

SK

*Možnostkúpynôh S907-003
 **Sprchovávaníkasifon Ø90 TAKO S904-006

EST

*Võimalusjalguosta S907-003
 **Dušialusesifoon Ø90 TAKO S904-006

LT

*Galimybėsigyti kojų S907-003
 **Dušopadėklosifonas Ø90 TAKO S904-006

LV

*Iespējaiegādāties kājas S907-003
 **Dušasteknesifons Ø90 TAKO S904-006

DE

*MöglichkeitBeinezu kaufen S907-003
 **Duschwannensiphon Ø90 TAKO S904-006

RO

*Posibilitatea de a cumpără picioare S907-003
 **Sifon cu tavă de duș Ø90 TAKO S904-006

HU

*Lehetővéglábakvásárlására S907-003
 **Zuhanytálcasifon Ø90 TAKO S904-006

UA

*Можливість придбання ніжок S907-003
 **Сифон для душового лотка Ø90 TAKO S904-006

BY

*Магчыма сцягнуць ніжкі S907-003
 **Душавы паддон, сифон Ø90 TAKO S904-006

RU


*Возможность купить ножки S907-003
 **Душевой поддон сифон Ø90 TAKO S904-006

EN






*Possibility to buy legs S907-003
 **Shower traysiphon Ø90 TAKO S904-006

FR


*Possibilité d'acheter des jambes S907-003
 **Siphon pour receveur de douche Ø90 TAKO S904-006

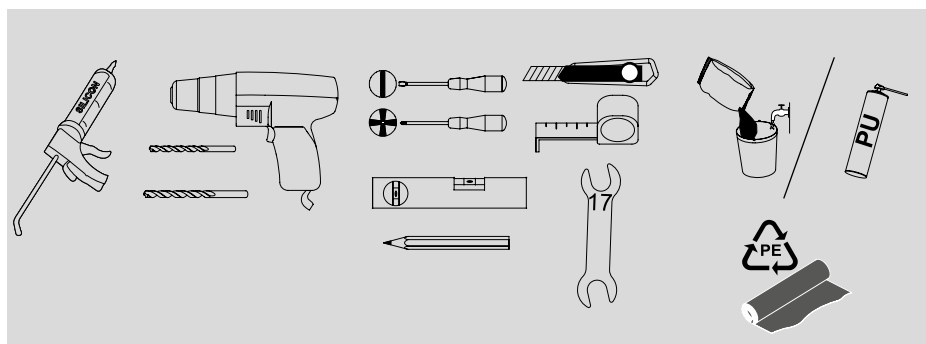

1. | TAKO

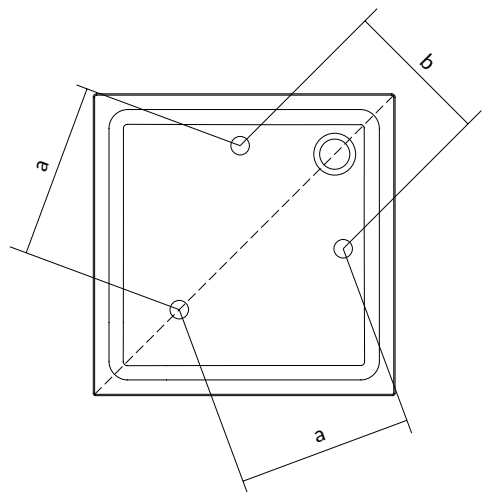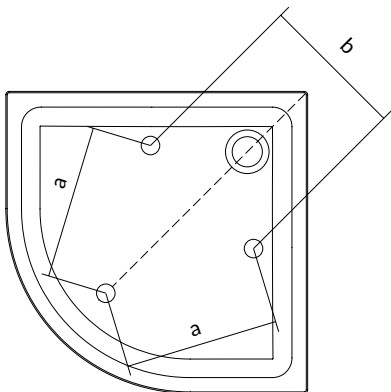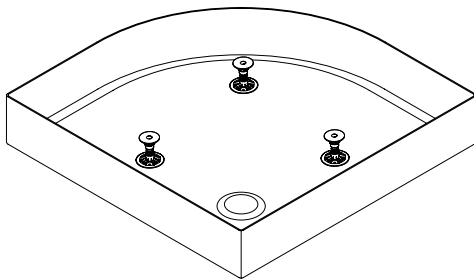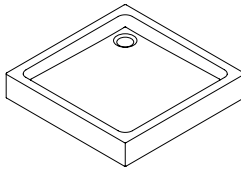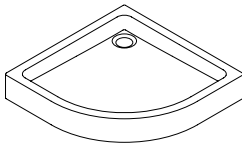


mm		
	a	b
80 x 80 x 16	350	260
90 x 90 x 16	450	375
80 x 80 x 16	420	300
90 x 90 x 16	495	300

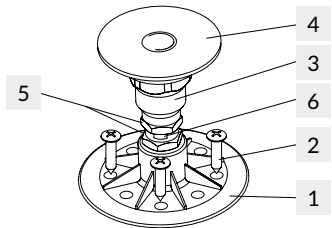


2. | TAKO




1

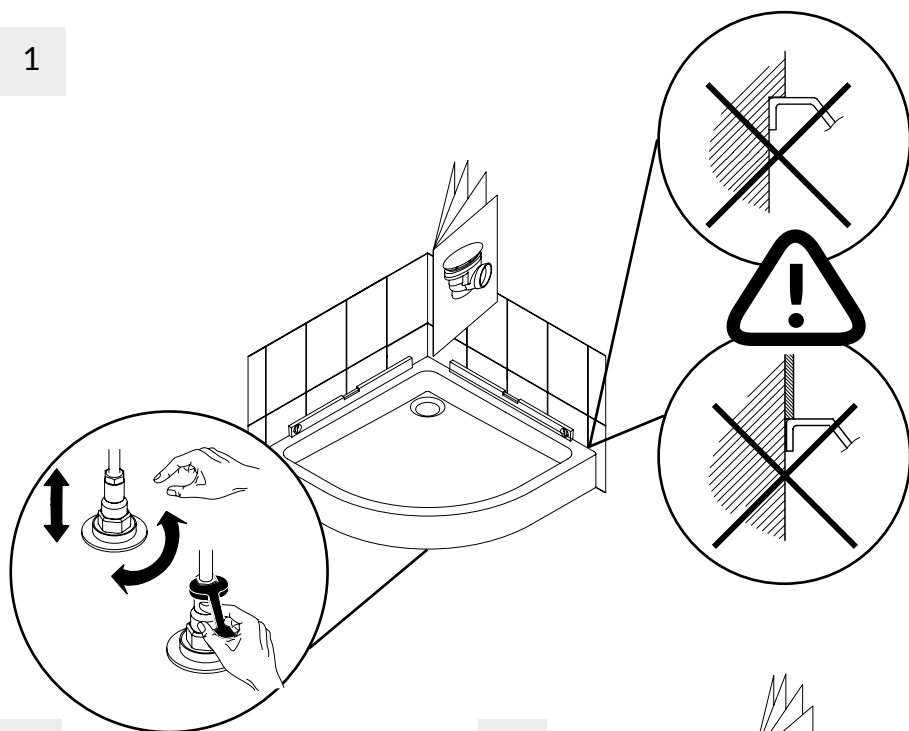

2

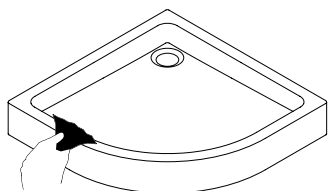

3

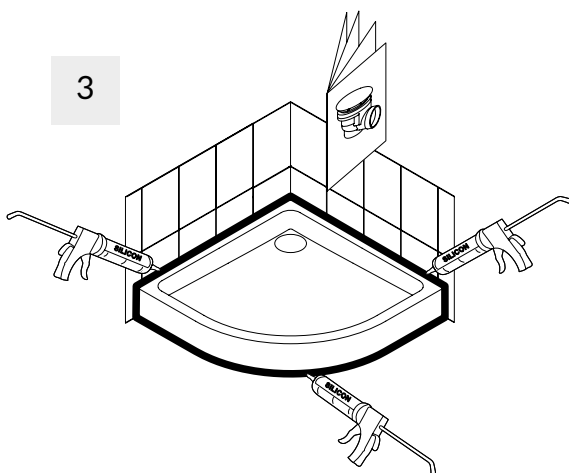



24h




1. | TAKO | TAKO SLIM



1

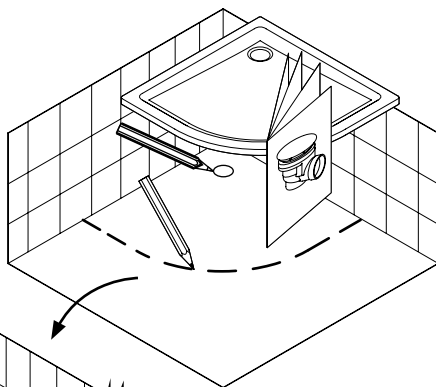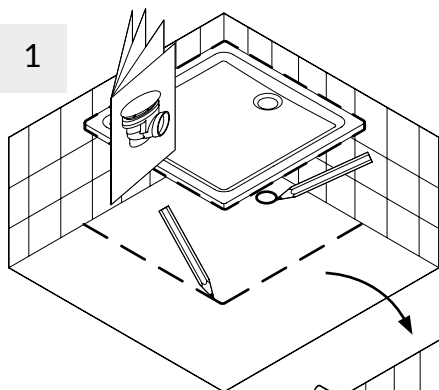


2

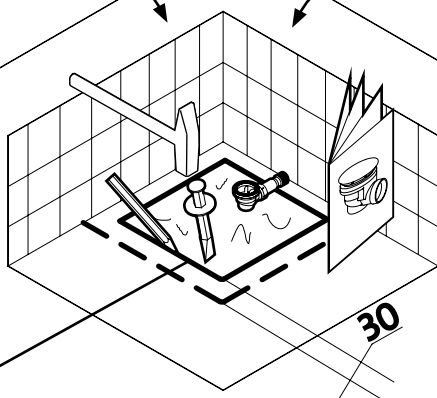


30

30

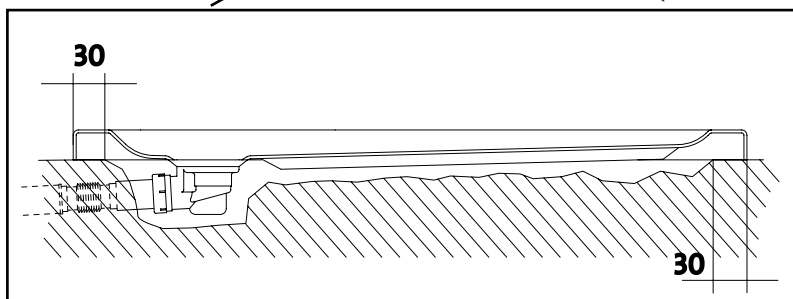


30

3

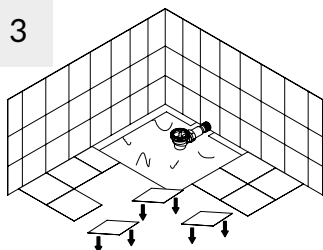


4

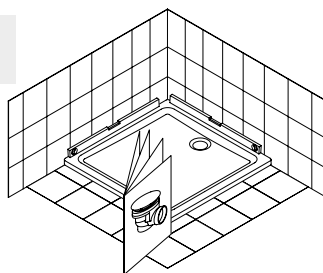


2. | TAKO | TAKO SLIM




1

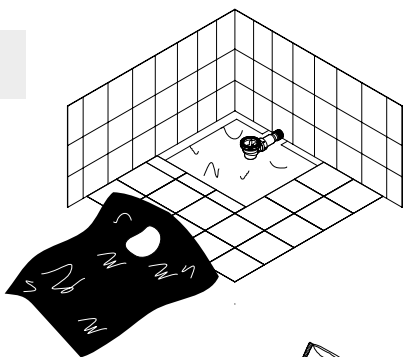


2

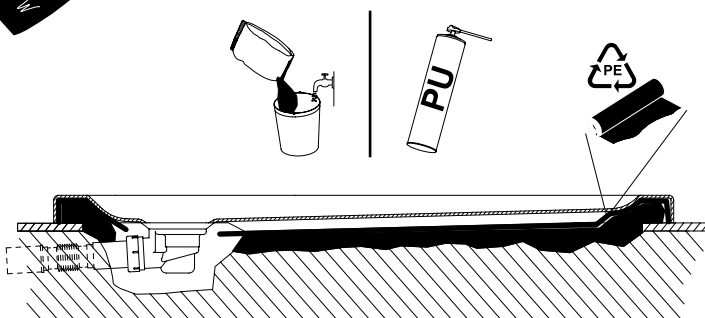


3

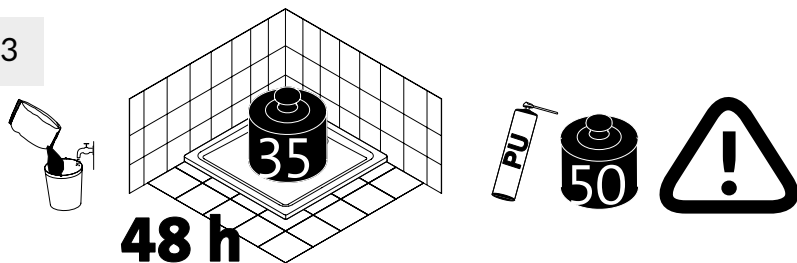

4

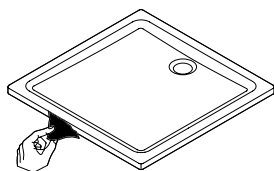


5

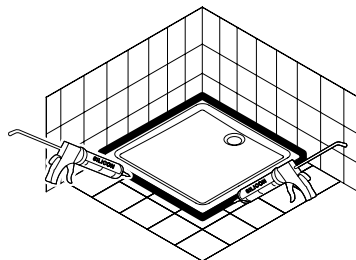





24h



3. | TAKO | TAKO SLIM + S907-003






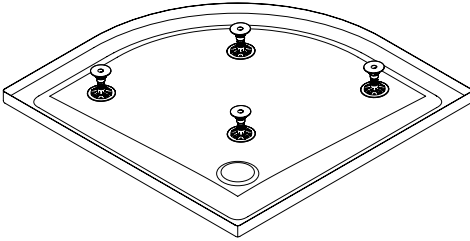


		mm		
		a	b	c
80 x 80		300	340	
90 x 90		445	445	
80 x 80		675	450	500
90 x 90		715	470	550
100 x 80 x 4		790	520	570
120 x 90 x 4		970	560	780

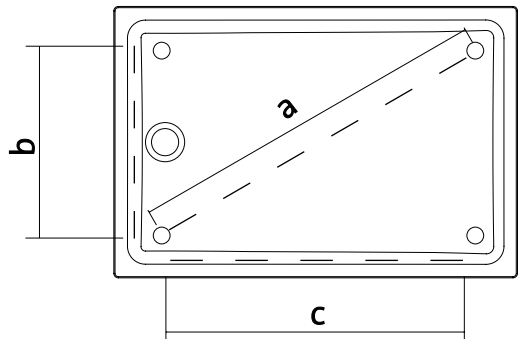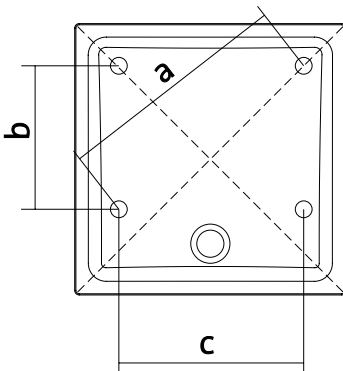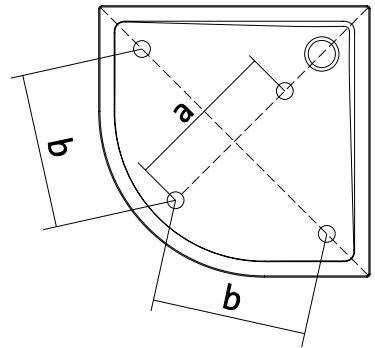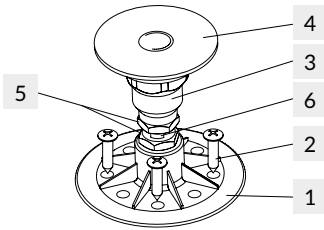


5. | TAKO | TAKO SLIM

1

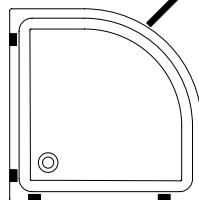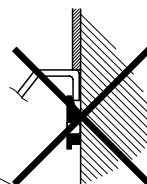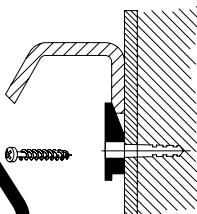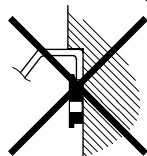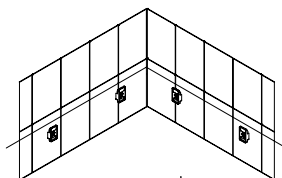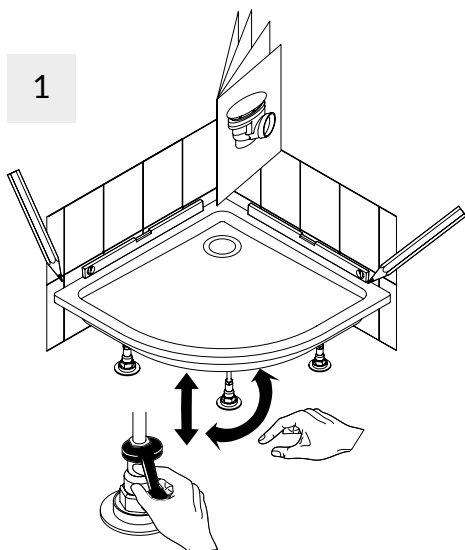

2

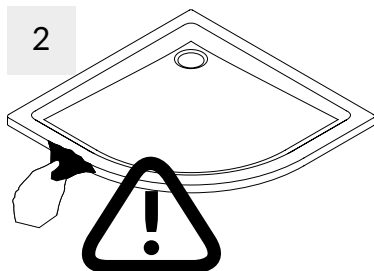

3

